
AMORPHIC PORCELAIN

19 PENDANTS ROUND CHANDELIER



CUSTOM LIGHTING

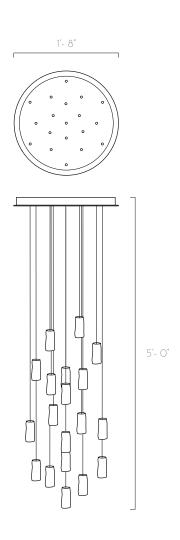

DESCRIPTION

The Amorphic Porcelain introduces warm and radiant light into your space with this whimsical staggering pendant that mimics a glowing waterfall. A design collaboration with Canadian porcelain artist Bill Reddick. Hanging from a custom-made ceiling base, these porcelain fixtures infuse character and mood while still evoking contemporary style.

TECHINCAL SPECIFICATIONS

Designed by

AM Studio Team

Category

Pendant Chandelier

Canopy Finish

Powder coated metal in Flat White/ Sparkle Silver

Canopy Size

20"D x 1.5"H

Pendant Size

19 units of 2"D x 4"H

Total Drop

5'H + 2' extra wire for adjustment

Bulb

Dimmable G4 LED - 12V - 2W

Recommended Dimming Switch

Lutron CTCL-153PD Lutron Pro

Transformer:

Magnitude E60R12DC - 60W 12VDC - Dimmable - Class 2 LED

Driver Input: 120V Output: 12V

Electrical Outlet needed:

Catalogue # AP-19-20D

Note: Due to the nature of our handmade work, there may be slight variances in the finishes. AM Studio light fixtues are made to order, handmade and created in Toronto, Canada.








ied Made in Canado




AMORPHIC PORCELAIN Assembly Guide

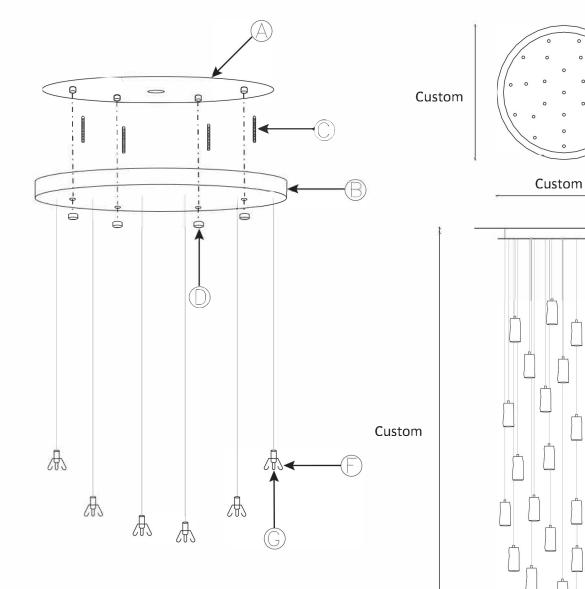

- \bigcirc Bridge
- Base
- Support Rods (Temporary Mounting Only)
- Button Head Screws
- Amorphic Porcelain Pendants
- Wire Metal Holders
 (To Hold Porcelain Pendants)
- (G) Bulbs




1.

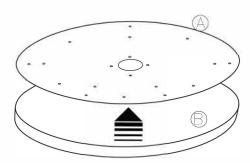


Separate $ext{ } ext{ } ex$

4.

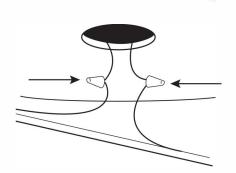

Connect electrical wire to the power

AMORPHIC PORCELAIN Assembly Guide

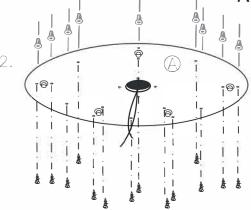

Mount (A) to the ceiling.

Note: When mounting be sure to locate and mount $(\widehat{\mathbb{A}})$ to a joist/celing beam

If you cannot do so, be sure to use drywall screws and anchors, drill additional holes for mounting for better support


5.

Test lights by turning on power

\<u>`</u>!\


Make sure bulb is not touching the glass!

Turn off power after testing

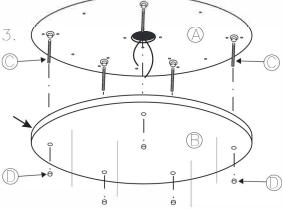


Use support rods \bigcirc provided to hang \bigcirc off of (\triangle)

Complete attachment with button head screws (1)

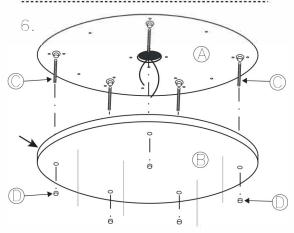

Remove rods \bigcirc and attach \bigcirc to \bigcirc with the button head screws \bigcirc



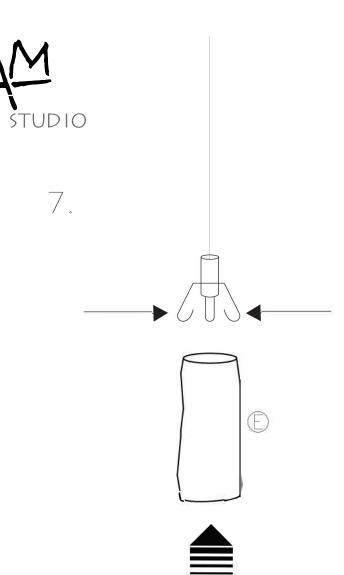



Always use gloves when handling glass

Take one Wire Metal Holder (used to hold Porcelain Pieces) , and pinch the metal wire ends (4 in total), then carefully slide the Amorphic Porcleain to secure them onto the Wire Metal Holders . Release your hand once the Porcelain in securely fastened to the Wire Metal Holder .





1



• Dust the cord/rope/chain with a duster.

2



 Hold the glass pendant/light fixture and gently wipe with a duster or microfiber cloth to remove dust.

3





• For spot cleaning, use any good glass cleaner and a microfiber cloth.



4.



• Finish by gently wiping down the pendant with a soft, dry microfibre cloth.

